

---

# How To Program Rca Remote

---

Downloaded  
from  
[evoluir.abar.org.br](http://evoluir.abar.org.br)  
by Yang &  
Alannah

---

## INTRODUCTION: WHY YOU NEED TO PROGRAM YOUR RCA REMOTE

---

Losing the original remote for your television or streaming device can be frustrating. That is where a universal remote like an RCA remote comes in handy. But before you can enjoy the convenience of one controller for all your entertainment devices, you must learn **how to program RCA remote** models correctly.

Whether you just bought a new RCA universal remote or you replaced the batteries and the settings were wiped, programming it properly ensures that pressing "Volume Up" actually adjusts your soundbar and not your TV. This guide will walk you through every method available, from auto search to direct code entry, so you can get all your devices working together seamlessly.

RCA remotes are popular because they are affordable and work with thousands of brands. However, the

programming process can be confusing if you do not know the steps. We will cover everything from understanding your remote's buttons to troubleshooting when a code does not work. By the end of this article, you will be able to program any RCA remote confidently, without needing to look up a manual every time.

---

## UNDERSTANDING YOUR RCA REMOTE

---

Before diving into the steps, take a moment to look at your remote. RCA sells several universal remote models, including the RCR series and the newer RCA G7, but they all share similar programming logic. Typically, you will find a **"Code Search"** or **"Setup"** button, a set

of device buttons (TV, DVD, AUX, STREAM, etc.), and the usual number pad, volume, channel, and power buttons. Make sure fresh batteries are installed and that your device is turned on. The remote needs an unobstructed line of sight to the infrared receiver on your device during programming.

If you have an older model, check the back label for the model number. Different models may require slightly different button sequences, but the core methods remain the same. Keep the manual handy if you still have it, but most of the time you can use the general methods described here.

---

## METHODS TO PROGRAM AN RCA

---

## REMOTE

There are three primary ways to program an RCA universal remote: auto code search, direct code entry, and manual code search. Each method works for different situations. The most common approach is auto code search because it does not require you to know a specific code. However, direct code entry is faster if you have the correct code for your device brand. Below we detail each method step by step.

## Auto Code Search

## Method (Easiest for Beginners)

This method automatically cycles through all available codes until it finds one that works. It can take a few minutes, but it is the most reliable when you do not have the code.

1. **Turn on the device** you want to control (e.g., TV) manually using its own power button.
2. On your RCA remote, press and hold the **“Code Search”**

- button  
(sometimes  
labeled “Setup”)  
until the red light  
turns on, then  
release.
3. Press the device  
button you want  
to program (e.g.,  
“TV”) once. The  
red light will  
blink and then  
stay solid.
  4. **Point the  
remote at the  
device** and  
press the  
**“Power”** button  
repeatedly  
(about once per  
second) until the  
device turns off.  
This indicates the  
remote has  
found a working  
code. Once the  
device turns off,  
press the device  
button again to  
lock in the code.  
The red light will  
turn off.
  5. Test other  
buttons like  
volume and  
input. If they  
work, you are  
done. If not,  
repeat the  
process but  
press the  
“Power” button  
more times to  
continue  
searching  
through codes.

This method works for most RCA remotes. Some models require you to hold down the device button instead of pressing “Power” repeatedly. Check your remote’s LED behavior – if the light stops blinking during the process, you may need to start over.

## Direct

# Code Entry Method (Fastest for Known Codes)

If you have a code for your brand (for example, 0037 for many Samsung TVs), this method is quick and precise. You can find codes in the manual or online (see section below).

1. Turn on your device manually.
2. Press and hold the **“Code Search”** button until the red light

turns on, then release.

3. Press the device button (e.g., “TV”) once. The red light will blink and then stay solid.
4. Using the number pad, enter the **4-digit code** for your brand. After the last digit, the red light will turn off if the code is accepted. If the light blinks then stays on, the code was invalid; try a different code.
5. Test the remote by pressing the Power button. If the device turns off, the code works. If not, repeat with another code from the list.

If you do not have a

code list, do not worry. Many online databases exist (e.g., the RCA support site) where you can search by brand and device type. Write down the working code for future reference.

## Manual Code Search Method (For Advanced Users)

Some RCA remote models do not have a “Code Search” button but instead rely on a combination of key presses. This method is

similar to auto search but involves manually advancing through codes using the channel up/down keys.

1. Turn on the device and point the remote at it.
2. Press and hold the **device button** (e.g., “TV”) and the **“Power”** button simultaneously until the LED turns on, then release both.
3. Press the **“CH+”** button repeatedly (one press per second) until the device turns off. This advances the code list.
4. Once the device turns off, press the device button once to lock the code. The LED will turn off.

5. Test other functions.

If you accidentally skip past the correct code, continue pressing CH+ until the device turns on again (indicating you have cycled through all codes). Then you can go back by pressing CH- slowly.

## Program ming for Specific Devices (TV, DVD, Streamin g,

## Soundbar

)

The same three methods apply to any device type. However, remember to press the correct device button before start. For example, to program your streaming stick (Roku, Fire TV), press "STREAM" or "AUX" if your remote has that button. If your remote does not have a streaming button, use "DVD" or "AUX" and test the code for streaming brands. Many RCA remotes include branded codes for popular streaming devices. For soundbars, use the "AUX" or "DVD" button depending on the model. Always power on the device manually first.

## **FINDING THE CORRECT CODE FOR YOUR DEVICE**

If you prefer direct code entry, you need the code for your specific brand. The official RCA remote manual usually includes a list of 4-digit codes organized by brand. If you have lost the manual, you can find the codes online at the RCA support website or third-party remote code databases. Simply search “RCA universal remote code for [your brand]” – for example, “RCA remote code for LG TV”. Many codes are standard across models, such as 0037 for Samsung, 0047 for Sony, and 0178 for Vizio. Write down the codes that work so you do not have to search again later.

Some newer RCA remotes support **“Brand Search”** – a feature where you enter the first two digits of the brand number, and the remote automatically scans only that brand’s codes. Check your manual for brand numbers (e.g., 01 for Samsung, 02 for LG). This saves time compared to full auto search.

## **TROUBLESHOOTIN G COMMON ISSUES**

Even with clear instructions, programming might not work on the first try. Below are frequent problems and how to fix them.

- **Remote does not respond at all:** Check batteries – make sure they are



fresh and inserted correctly. Look for the LED indicator; if it does not light up when you press a button, replace batteries.

- **Device does not turn off during auto search:** Ensure no obstacles (like furniture) block the infrared signal. Move closer to the device (within 3-6 meters). If the remote still cannot find a code, try the manual code search method.
- **Code accepted but only some buttons work:** The remote may have found a “partial” code that controls

power and volume but not input or menu. Try additional codes from the list until full functionality is achieved.

- **Remote controls multiple devices at once:** You might have accidentally programmed the same code on two device buttons. Clear the remote by performing a system reset (see manual). Usually, press and hold “Code Search” until LED blinks twice, then press “0” and “1” for some models.
- **“Code Search” button missing:** On

newer RCA remotes, the button may be labeled “SETUP” or a gear icon. If still missing, consult the manual for an alternative (e.g., press and hold “Power” + “CH-”).

If all else fails, check the manufacturer’s website for a clear guide for your remote model number. Many RCA models have video tutorials too.

---

## ADDITIONAL TIPS AND BEST PRACTICES

---

To get the most out of your RCA remote programming, follow these suggestions:

- **Keep a record:** Once you find the correct code, write it down on

a label and stick it inside the battery compartment or on the back of the remote.

- **Test all functions:** Do not just test power; check volume, mute, input, channel, and menu buttons. Some codes may control power but not volume – try another code.
- **Use the correct device button:** If you have a soundbar, do not try to program it under the “TV” button if you want independent control. Instead, use “AUX”.
- **Update your remote’s firmware (if**

**applicable):**

Some high-end RCA remotes support firmware updates via USB. This can expand the code library.

- **Reset before reprogramming**

: If you are having persistent issues, reset the remote to factory settings.

Typically, press and hold “Code Search” for 5 seconds, then press “0” three times, then release. The LED will blink twice.

- **Use the remote’s macro feature (if available):**

Some RCA models let you assign a macro button to turn on multiple devices at once. Refer to

the manual to set up activities.

---

## CONCLUSION

---

Learning **how to program RCA remote** units is a straightforward process once you understand the three core methods: auto code search, direct code entry, and manual code search. Whether you are setting up a new universal remote or reprogramming after a power loss, you now have the knowledge to do it in minutes. Remember to keep a list of your working codes and always test multiple functions. If you encounter difficulties, try the troubleshooting tips above or consult the official RCA support website. Your entertainment system

should work multiple controllers.  
harmoniously with a Enjoy the simplicity of  
single remote, freeing your fully programmed  
you from the clutter of RCA remote!