

---

# Kenmore Elite 45986 Front Load Troubleshooting

---

*Kenmore Elite 45986  
Front Load  
Troubleshooting*

*Downloaded from  
[evoluir.abar.org.br](http://evoluir.abar.org.br) by  
Brylee & Eugene*

---

## **MASTERING KENMORE ELITE 45986 FRONT LOAD TROUBLESHOOTING: A COMPLETE GUIDE**

---

Few household appliances match the convenience of a modern front load washer—until something goes wrong. The Kenmore Elite 45986 is a popular, high-efficiency model known for its

performance and sleek design. However, like any precision machine, it can encounter hiccups. Whether your washer refuses to drain, leaves your clothes soaking wet, or displays cryptic error codes, this comprehensive guide to **Kenmore Elite 45986 front load troubleshooting** will help you diagnose and resolve the most common problems. We'll walk you through each issue step by step, explaining the likely causes and offering practical repairs you can try

before calling a technician.

By the end of this article, you'll have a clear understanding of how to keep your Kenmore Elite 45986 running smoothly—saving both time and money. Let's dive right in.

---

## COMMON PROBLEMS WITH THE KENMORE ELITE 45986 AND THEIR SOLUTIONS

---

# 1. The Washer Won't Start

One of the most frustrating issues is when you press the power button and nothing happens. Before assuming a major electrical fault, run through these

checks:

- **Ensure the door is fully closed and latched.** Front load washers have a safety interlock that prevents operation if the door isn't sealed. Push the door firmly until you hear a click.
- **Check the household circuit breaker.** A tripped breaker or blown fuse will cut all power. Reset the breaker or replace the fuse.
- **Examine the power cord and outlet.** Look for visible damage or loose connections. Try plugging another device into the same outlet to verify power is present.
- **Wait for the control lock to disengage.** If the control lock (or child lock) is active, the washer

won't respond. Consult your manual to deactivate it—usually by holding a specific button combination.

If none of these steps solve the problem, the issue may be a faulty door latch assembly, a defective control board, or a failed main power relay. These require professional diagnosis.

## 2. Kenmore Elite 45986 Not Draining or

## Spinning

A washer that fills with water but won't drain—or that stops mid-cycle leaving clothes soaked—is a top complaint. This often points to a clog or pump failure. Here's how to troubleshoot:

1. **Clean the drain pump filter.**

The Kenmore Elite 45986 has a small access panel at the bottom front. Open it, place a shallow pan to catch water, and unscrew the filter. Remove lint, coins, buttons, or debris. Reinsert the filter securely.

2. **Check the drain hose for kinks or blockages.** Ensure the hose is not bent or pinched behind the machine. Also, verify that the

standpipe or laundry sink drain is not clogged.

3. **Inspect the drain pump itself.**

If the pump makes a humming noise but doesn't expel water, it might be jammed by a small object (like a bra wire or screw). You may need to disassemble the pump housing (after unplugging) to remove the obstruction.

4. **Test the lid lock and door switch.** On many models, the washer will not spin or drain if the door switch is faulty. You can bypass the switch temporarily with a multimeter, but replacement is safer.

If the pump motor is burned out or the control board fails to send power,

replacement parts are widely available and relatively inexpensive for this model.

## 3. Kenmore Elite 45986 Leaking Water

A puddle under your washer is never welcome. Leaks can originate from multiple points. Identify the source using these clues:

- **Water at the front or door -**  
Check the rubber door gasket for tears, cracks, or trapped debris. Wipe the gasket and run a cleaning cycle. If the gasket is

damaged, it must be replaced.

- **Water at the bottom** - Examine the hose connections at the back of the machine. Tighten any loose fittings. Also look for leaks from the drain pump filter area—ensure the filter is screwed in fully.
- **Water under the detergent drawer** - Over-sudsing or using too much detergent can cause foam to overflow. Use only HE detergent and follow the recommended amount. Clean the drawer and its housing regularly.
- **Leaks during spin cycles** - A cracked tub or failing bellows (if your model has one) can throw water. This requires major disassembly and is best left to a pro.

## 4. Excessive Noise During Operation

Is your Kenmore Elite 45986 banging, squealing, or grinding? Some noise is normal, but unusual sounds indicate trouble:

- **Banging or thumping** - An unbalanced load is the most common cause. Pause the cycle, redistribute clothes evenly, and restart. Overloading the washer also stresses the suspension springs and shock absorbers.
- **Squealing or screeching** - This

often comes from worn drum bearings or a failing drive belt. Listen carefully to pinpoint the location. Replacing bearings is an advanced job; a squealing belt can be tightened or replaced.

- **Grinding or clicking** - Foreign objects (coins, keys) trapped in the pump or under the drum can create grinding sounds. Remove the pump filter and check the drum seal area.
- **Humming without motion** - If the drum doesn't turn, the motor capacitor or motor itself may be defective. Also check the belt tension.

## 5. Kenmore Elite 45986 Error Codes Explained

Modern front loaders communicate through error codes displayed on the panel. Here are the most frequent codes for the 45986 and their meanings:

- **F11** - Communication error between the main control board and the motor speed control board. Often requires a control board replacement or harness check.
- **F21** - Long drain time. Usually caused by a clogged pump, kinked

drain hose, or a faulty pressure switch.

- **F32** – Water level sensor error. The pressure hose may be disconnected or the sensor itself defective.
- **F35** – Temperature sensor malfunction. Unplug the washer for a few minutes to reset the control. If it returns, the thermistor or main board needs service.
- **F42** – Door lock failure. The door may not latch correctly, or the locking mechanism is broken. Inspect the door strike and latch assembly.
- **F5E** – Water temperature error – electrical heating (if equipped) issue.

When you see a code, write it down, then unplug the washer for 60 seconds to clear the memory. If it reappears, you have a persistent hardware fault.

---

### STEP-BY-STEP TROUBLESHOOTING FOR SPECIFIC SYMPTOMS

---

## Washer Fills But Won't Agitate or Spin

If water flows in but the drum remains still, follow these steps:

1. Check that the drain pump filter is clean—sometimes a clogged pump

prevents the control from advancing.

2. Manually rotate the drum by hand. If it's hard to turn, the bearings may be seized.
3. Listen for the motor hum. If you hear buzzing but no rotation, the motor start capacitor might be failing.
4. Inspect the drive belt. Remove the back panel and look for a loose or broken belt. Replace as needed.
5. Test the door lock switch with a multimeter. An unlocked door will block spin and agitate functions.

## Clothes Come Out Damp or Soaking Wet

Poor spin performance leaves laundry heavy with water. Suspect these issues:

- **Drain pump filter blocked** – Clean it thoroughly.
- **Low voltage or slow pump operation** – The pump may be weak due to wear.
- **Excessive suds** – Too much detergent reduces spin efficiency. Run a rinse cycle to clear foam.
- **Large or heavy load** – The washer's capacity is around 4.5



cubic feet; overloading prevents proper spinning.

- **Faulty pressure switch** – This controls the water level; if it's stuck, the washer may not drain completely before spinning.

## Door Won't Unlock After Cycle

It's alarming when you can't open the door. The Kenmore Elite 45986 has a safety lock that stays engaged until the water drains and the drum stops. If the door remains stuck:

1. Wait 2–3 minutes after the cycle ends. The lock may be in a cooling-down period.
2. Turn the cycle selector to “Drain & Spin” to force any remaining water out.
3. Unplug the washer for 5 minutes. This often resets the door lock electronics.
4. If the lock still won't release, use the manual release tab (usually near the door latch) or a thin tool to gently pry the latch—but be careful not to break the plastic.
5. If none of this works, the door lock assembly likely needs replacement.

---

### PREVENTIVE MAINTENANCE FOR

## **YOUR KENMORE ELITE 45986**

---

Regular care dramatically reduces the need for troubleshooting. Follow these tips to extend the life of your washer:

- **Use only HE detergent.** Regular soap creates excess suds that impair performance and cause odors.
- **Clean the door gasket monthly.** Wipe the rubber seal with a damp cloth and a mild bleach solution to prevent mold and mildew.
- **Run a self-clean cycle every 1-2 months.** Use a washing machine cleaner or a cup of white vinegar in the drum on the hottest cycle.
- **Leave the door open between**

**washes.** This allows the interior to dry out and prevents musty smells.

- **Check and clean the drain pump filter quarterly.** Remove lint and debris before they cause clogs.
- **Inspect hoses annually.** Look for cracks, bulges, or leaks. Replace rubber hoses every 3-5 years to avoid flood damage.
- **Level the washer.** An unlevel machine vibrates excessively, causing noise and premature wear. Adjust the feet and use a bubble level.

---

## **WHEN TO CALL A PROFESSIONAL**

---

While many **Kenmore Elite 45986 front load troubleshooting** steps are

DIY-friendly, some problems require technical expertise. Contact a qualified appliance technician if:

- You encounter persistent error codes after following reset procedures.
- The drum is completely seized or makes a loud grinding noise.
- There's a burning smell from the motor or heating element.
- The control board or wiring

appears damaged.

- The machine trips the breaker repeatedly.
- You are not comfortable disassembling parts or using a multimeter.

---

## CONCLUSION

---

Owning a Kenmore Elite 45986 front load washer brings efficiency and convenience, but occasional issues are inevitable. With