

---

# Wiring Diagram For Delco Remy Alternator

---

*Wiring  
Diagram For  
Delco Remy  
Alternator*

*Downloaded  
from  
[evoluir.abar.org.br](http://evoluir.abar.org.br)  
by Karlee &  
Logan*

---

## UNDERSTANDING THE WIRING DIAGRAM FOR DELCO REMY ALTERNATOR: A COMPREHENSIVE GUIDE

---

Few components in an automotive or marine electrical system are as critical as the alternator. Responsible for keeping the battery charged and powering the electrical loads while the engine runs, a faulty alternator can

leave you stranded. Among the most trusted and widely used alternators in the world are those manufactured by Delco Remy. From classic cars and hot rods to heavy-duty trucks and industrial machinery, the Delco Remy alternator is a staple. However, to install, troubleshoot, or replace one properly, you need more than just the part itself—you need a clear understanding of the **wiring diagram for Delco Remy alternator**. This article

will provide a detailed, easy-to-follow guide on these wiring systems, breaking down the terminals,

configurations, and best practices for a successful installation.

Whether you are a seasoned mechanic or a dedicated DIY enthusiast, getting the wiring right is essential. The wrong connection can lead to poor charging performance, a dead battery, or even damage to the alternator and other electrical components. By the end of this guide, you will have a solid grasp of how to read and implement a wiring diagram for Delco Remy alternator, ensuring your electrical system operates reliably for years to come.

---

## **THE LEGACY AND EVOLUTION OF THE DELCO REMY ALTERNATOR**

---

Before diving into the wiring itself, it is helpful to understand what makes the Delco Remy alternator so popular. Originally developed by the Delco-Remy division of General Motors, these alternators have been powering vehicles since the 1960s. The most common models include the 10SI, 12SI, 15SI, and 27SI, with the SI series (Systems Integrated) being particularly famous for their compact design and built-in voltage regulators.

One of the reasons these alternators are still used today, even in non-GM applications, is their robust construction and the

ease of finding replacement parts. The wiring diagram for Delco Remy alternator is also relatively straightforward compared to some modern, computer-controlled units, making them a favorite for custom builds and vintage restorations. Understanding the specific model you are working with is the first step, as terminal designations can vary slightly between the 10SI and the later CS series, for example.

---

### WHY YOU NEED A WIRING DIAGRAM FOR DELCO REMY ALTERNATOR

---

A wiring diagram is not just a luxury; it is a necessity. Here is why having the correct wiring diagram for Delco Remy alternator is non-negotiable:

- **Safety:** Incorrect wiring can cause short circuits, electrical fires, or damage to expensive components. A diagram shows you the proper paths for high-current cables.
- **Optimal Performance:** Ensuring the voltage sense wire is connected correctly allows the alternator to charge at the right voltage, preventing overcharging or undercharging.
- **Diagnostics:** When the charging system fails, a wiring diagram is your roadmap for testing. You can systematically check voltage at

each terminal to isolate the problem.

- **Compatibility:** Whether you are converting from a generator or swapping in a higher-output alternator, a diagram helps you adapt the wiring to your specific vehicle or equipment.

---

## KEY TERMINALS AND THEIR FUNCTIONS

---

To read a wiring diagram for Delco Remy alternator, you must first understand what each terminal does. Most SI-series alternators have a standard set of terminals, though some may have additional connections for specialized applications.

# The Main Output Terminal (BAT)

This is the large, heavy-duty terminal, usually marked with a red cover or the letter "B" or "BAT". It is connected directly to the positive terminal of the battery, often via the starter solenoid or a high-amperage fuse. This is where the charging current flows to the battery and the rest of the electrical system. The cable connected here must be appropriately sized for the alternator's output, typically 4 AWG or 6 AWG for standard units.

## The Sense Terminal (S)

This terminal is critical for voltage regulation. The internal voltage regulator monitors the voltage at the battery through the sense wire. If the alternator is wired as a "one-wire" setup, the sense function is performed internally. However, in a standard three-wire configuration, the "S" terminal is connected to the battery positive or the main power distribution point. This allows the alternator to compensate for voltage drops in the charging circuit, ensuring the battery

receives the correct charge voltage.

## The Indicator Light Terminal (L or No. 1)

Often labeled "L" or "1", this terminal connects to the charge warning light on the dashboard. When the ignition is turned on, the light illuminates. This small current excites the alternator's rotor, initiating the charging process. Once the alternator begins producing voltage, the light goes out. If the light stays on while the

engine is running, it indicates a charging problem. In many wiring diagrams for Delco Remy alternator, this terminal is also used to provide a small initial field current to "excite" the alternator.

## The Field Terminal (F or No. 2)

This terminal is sometimes used for auxiliary connections or for remote voltage sensing. In some diagrams, it is referred to as the "F" terminal (field). However, in a standard internally regulated Delco Remy alternator, the field is controlled internally. The "F" terminal on

some models is used as a tachometer output or for other purposes, so it is essential to check the specific diagram for your unit.

## The Ground Terminal (GND)

Proper grounding is crucial. The alternator case itself is typically grounded through the engine block. However, some wiring diagrams show a dedicated ground wire from the alternator to the engine or chassis. Ensuring a clean, tight ground connection is just as important as the power connections.

---

## COMMON WIRING CONFIGURATIONS

There are three primary ways to wire a Delco Remy alternator. Each has its own advantages and is suited to different applications. Understanding these will help you choose the right wiring diagram for Delco Remy alternator for your project.

### One-Wire Configuration

As the name suggests, this setup uses only the main BAT output wire. The alternator "self-excites" by sensing a small amount of residual magnetism in the rotor when the engine starts.

A Delco Remy alternator reaches a certain RPM, it starts charging. This is a popular choice for hot rods, street rods, and other custom builds because it eliminates the need for the ignition wire and the warning light. However, the downside is that the alternator must rev up to a higher speed to start charging, and there is no dashboard warning light to indicate a failure.

### Three-Wire Configuration

This is the most common and most reliable configuration. It uses three

connections: the BAT terminal to the battery, the "S" (sense) terminal to the battery or power distribution point, and the "L" (or "1") terminal to the ignition switch through a warning light (or a resistor if no light is used). The three-wire setup provides immediate excitation at low RPM, more accurate voltage regulation, and a dashboard warning light. For most daily drivers and serious applications, this is the recommended wiring diagram for Delco Remy alternator.

## Externall y

# Regulate d Configura tion

Older Delco Remy alternators (pre-SI series) and some specialty units use an external voltage regulator. This wiring diagram is more complex, with multiple wires connecting the alternator to a separate regulator box. While less common today, understanding this configuration is essential for restoring vintage vehicles from the 1960s and early 1970s. The external regulator controls the field current based on battery voltage and temperature.

## **STEP-BY-STEP GUIDE TO WIRING A DELCO REMY 10SI ALTERNATOR**

Let us walk through the process using the popular 10SI model as an example. This guide assumes a standard three-wire setup, which offers the best performance and reliability.

## **Tools and Materials You Will Need**

- Delco Remy 10SI alternator
- Battery cables (appropriate gauge for your alternator output)
- #10 or #12 wire

for the sense and exciter circuits

- Ring terminals and butt connectors
- Heat shrink tubing or electrical tape
- Wire strippers and crimpers
- Multimeter for testing
- Dash warning light (12V, 2-watt bulb) or a resistor (approx. 500 ohms, 5 watts)

## **Step 1: Verify Your Alternato**

r

Look at the back of the alternator. You should see two small terminals side-by-side near the large BAT terminal. These are typically marked "1" and "2" or "L" and "S". Some models have a third small terminal labeled "F" or "R". For a standard 10SI, terminal #1 is the exciter (L), and terminal #2 is the sense (S).

**Step 2:**  
**Connect**  
**the Main**  
**Battery**

# Cable

Attach a heavy-gauge wire (minimum 6 AWG, preferably 4 AWG) from the BAT terminal on the alternator to the positive terminal of the battery or the battery connection on the starter solenoid. Use a fuse or circuit breaker rated for the alternator's output close to the battery end for safety. Tighten this connection securely, as it carries the full charging current.

**Step 3:**  
**Wire the**  
**Sense**

## Terminal (S or #2)      Exciter Terminal (L or #1)

Run a #10 or #12 wire from the "S" terminal to the positive battery terminal. This allows the alternator's regulator to sense the actual battery voltage. This wire does not carry significant current, so a fused connection is not strictly necessary, but it is good practice. Some installers connect this to the main power distribution block instead of directly to the battery.

### Step 4: Wire the

This is the most important step for initial startup. Route a #12 wire from the "L" terminal to the dashboard. This wire should go through a 12V warning light bulb. The other side of the bulb connects to the ignition switch (switched 12V). When you turn the key to the "ON" position, the bulb should light up. This current excites the alternator. When the engine starts and the alternator produces voltage, the bulb goes out because both sides of the bulb have 12V. If you do not have a warning light, you can substitute a 500-ohm,

5-watt resistor in series with the ignition wire.

## Step 5: Ground the Alternator

Ensure the alternator case has a solid ground path through the engine block. Use a heavy ground strap from the engine block to the chassis. If your alternator has a dedicated ground terminal, use it. A poor ground is a common cause of charging problems.

## Step 6: Test the System

Before starting the engine, double-check all connections. Use a multimeter to measure voltage at the battery. It should read around 12.6V with the engine off. Start the engine and measure again. A properly working charging system should show 13.8 to 14.5 volts at the battery at idle. Rev the engine and ensure the voltage stays stable. Check that the warning light behaves correctly (on with key, off with engine running).

---

### **READING COMPLEX WIRING DIAGRAMS**

## **FOR DELCO REMY ALTERNATOR**

---

For Remy units like the  
24SI or 28SI,