

---

# Sharp Carousel Microwave Parts Waveguide Cover

---

*Sharp Carousel  
Microwave Parts  
Waveguide Cover*

*Downloaded from  
[evoluir.abar.org.br](http://evoluir.abar.org.br) by  
Mohammed & Maritza*

---

## INTRODUCTION: THE UNSUNG HERO OF YOUR MICROWAVE

---

When your Sharp Carousel microwave stops heating food evenly, or you notice a strange burning smell during operation, the culprit might be a small but critical component: the **Sharp Carousel Microwave Parts Waveguide Cover**. This seemingly

simple piece of mica or plastic is often overlooked during routine maintenance, yet it plays a vital role in the safe and efficient operation of your appliance. Without a properly functioning waveguide cover, your microwave's internal electronics are exposed to grease, food splatters, and moisture, which can lead to costly repairs or even complete system failure. In this comprehensive guide, we will explore everything you need to know about the

waveguide cover, from its function and common failure signs to a detailed replacement process and answers to frequently asked questions. Whether you are a seasoned DIY enthusiast or a first-time repairer, understanding this component is essential for extending the life of your Sharp Carousel microwave.

---

## **WHAT IS A WAVEGUIDE COVER AND WHY DOES IT MATTER?**

---

The waveguide cover is a protective shield located inside the microwave cavity, typically mounted on the side or back wall. In a Sharp Carousel microwave, it is positioned to cover the opening where the microwave energy (generated by the magnetron) enters the cooking chamber. This cover is usually made from a material that is transparent

to microwaves, such as mica or a specialized plastic, allowing electromagnetic waves to pass through while preventing food, grease, and moisture from contaminating the waveguide and the sensitive components behind it.

Without the waveguide cover, the waveguide itself would be exposed to the harsh environment inside the microwave. Over time, food particles and grease would accumulate, causing arcing, sparking, and eventually damage to the magnetron or the waveguide assembly. This is why the **Sharp Carousel Microwave Parts Waveguide Cover** is considered a sacrificial component: it takes the brunt of the abuse so that more expensive parts remain safe. Regular inspection

and timely replacement of this cover are simple yet effective ways to avoid major repair bills.

## How the Waveguide Cover Works in a Sharp Carousel Microwave

Sharp Carousel microwaves are known for their reliable performance and innovative turntable system that ensures even cooking. The waveguide cover sits at the point where the microwave

radiation exits the waveguide channel and enters the cavity. When you press the start button, the magnetron generates microwaves, which travel through the waveguide and pass through the cover into the cooking area. The cover itself does not absorb or alter the microwaves; it simply acts as a transparent barrier. This design is consistent across most Sharp models, though the exact shape and size of the cover can vary depending on the specific model number.

Because the waveguide cover is exposed to heat, steam, and grease, it can become brittle, discolored, or burned over time. When this happens, its ability to protect the waveguide is compromised. A cracked or burned cover may even cause arcing, which can

damage the interior of the microwave and pose a fire hazard. This is why understanding the condition of your waveguide cover is so important for the longevity of your appliance.

---

## **SIGNS THAT YOUR SHARP CAROUSEL MICROWAVE WAVEGUIDE COVER NEEDS REPLACEMENT**

---

Recognizing the warning signs of a failing waveguide cover can save you from more extensive repairs down the road. Below are the most common indicators that it is time to replace the **Sharp Carousel Microwave Parts Waveguide Cover**:

- **Visible burn marks or discoloration:** If you see brown or

black spots on the cover, it has been subjected to excessive heat or arcing.

- **Cracks or holes:** Any physical damage to the cover means it can no longer provide proper protection.
- **Arcing or sparking inside the microwave:** This is a clear sign that the cover is damaged and microwaves are contacting exposed metal or food residue.
- **Unusual noises during operation:** A buzzing or humming sound may indicate that the magnetron is working harder due to a compromised waveguide.
- **Food not heating evenly:** While this can be caused by several factors, a damaged waveguide

cover is a possible culprit.

- **Burning smell:** If you notice a burnt odor, especially after cooking, the cover may be overheating or burning.

If any of these signs are present, it is highly recommended to inspect the waveguide cover immediately. Replacing it is a straightforward process that can be completed with minimal tools and cost.

---

### HOW TO LOCATE THE CORRECT SHARP CAROUSEL MICROWAVE PARTS WAVEGUIDE COVER

---

Finding the right replacement part for your Sharp Carousel microwave is crucial. Using an incorrect or incompatible cover can lead to poor

performance or even damage to the appliance. Here is a step-by-step approach to ensure you get the correct **Sharp Carousel Microwave Parts Waveguide Cover:**

1. **Find your model number:** This is usually located on a sticker or plate on the back, side, or inside the door frame of the microwave. It typically begins with "R-" followed by a series of numbers and letters (e.g., R-305KS).
2. **Check your owner's manual:** The manual often lists the part numbers for common replacement items, including the waveguide cover.
3. **Search online with your model number:** Use the model number

to search for parts. Reputable parts retailers will list the specific waveguide cover that fits your model.

4. **Compare the shape and size:** If you already have the old cover, compare it visually with the replacement. Pay attention to the mounting holes and overall dimensions.
5. **Verify material type:** Most Sharp Carousel microwaves use a mica or plastic waveguide cover. Confirm that the replacement is made from the same material as the original.
6. **Purchase from a trusted source:** Use authorized dealers or well-reviewed parts suppliers to avoid counterfeit or low-quality

parts.

Taking these steps will help you avoid the frustration of ordering the wrong part. Many online stores also offer compatibility checking tools where you can enter your model number to see a list of compatible parts.

---

## STEP-BY-STEP GUIDE TO REPLACING THE WAVEGUIDE COVER

---

Replacing the waveguide cover in a Sharp Carousel microwave is a task that most homeowners can handle with basic tools and a little patience. Always prioritize safety: unplug the microwave from the power source before starting any repair. Even after unplugging, the capacitor can hold a dangerous charge,

so if you are unsure about discharging it, consider hiring a professional. Below is a general guide that applies to many Sharp Carousel models.

## Tools and Materials Needed

- Replacement **Sharp Carousel Microwave Parts Waveguide Cover** (specific to your model)
- Phillips-head screwdriver (usually #2)
- Flat-head screwdriver or pry tool (for gently removing the old cover)
- Clean cloth or paper towels
- Mild detergent or microwave cleaner

- Optional: multimeter (for advanced safety checks)

## Step 1: Unplug the Microwave

Disconnect the microwave from the electrical outlet. Do not skip this step. Even though you are only working inside the cavity, there are high-voltage components inside the microwave that can be dangerous if accidentally contacted.

## Step 2: Remove

# the Old Waveguide Cover

Open the microwave door and locate the waveguide cover. It is usually on the right side wall or the back wall of the cavity. In most Sharp Carousel models, the cover is held in place by one or two screws or by plastic tabs. Remove the screws carefully and set them aside. If the cover is held by tabs, gently push or pry the cover away from the wall. Be careful not to damage the surrounding plastic or the waveguide opening.

## Step 3: Clean the Area

Before installing the new cover, clean the area around the waveguide opening. Use a damp cloth with mild detergent to remove any grease, food residue, or debris. Allow the surface to dry completely. A clean surface ensures that the new cover will sit flat and function properly.

## Step 4: Install



# the New Waveguide Cover

Take your new replacement cover and position it over the waveguide opening. Make sure it aligns with the screw holes or tabs. If your model uses screws, insert them and tighten gently. Do not overtighten, as this could crack the cover. If the cover uses tabs, press it firmly into place until it snaps securely.

## Step 5: Test the Microwave

Plug the microwave back in. Place a microwave-safe cup of water inside and run the microwave for about 30 seconds. Listen for any unusual noises and check that the water heats normally. If everything works properly, your replacement was successful. If you still notice arcing, sparking, or unusual sounds, double-check that the cover is properly installed and that no debris is interfering.

---

### **COMMON QUESTIONS ABOUT THE SHARP CAROUSEL MICROWAVE**

## **WAVEGUIDE COVER**

---

Can I use my microwave without the waveguide cover?

No. Operating a microwave without the waveguide cover exposes the waveguide and magnetron to grease and moisture, leading to immediate damage and potential fire hazard. Always replace a damaged or missing cover before using

the microwave.

How often should I replace the waveguide cover?

There is no set schedule, but you should inspect the cover every few months, especially if you use the microwave frequently. Replace it at the first sign of discoloration, cracking, or burning.

Is the waveguide cover the same for all Sharp Carousel models?

No. While the function is the same, the shape, size, and mounting method vary between models. Always use the part that matches your specific model number.

Can I clean the waveguide cover instead of replacing it?

You can wipe away surface grease with a soft cloth, but once the cover is burned, cracked, or discolored, it must be replaced. Cleaning will not restore its protective properties.

What happens if

# I install the cover upside down or backwards?

If the cover is not symmetrical, installing it incorrectly could block the microwave beam or cause it to vibrate, leading to noise or inefficient heating. Ensure the cover is oriented exactly as the original was.

---

## **CONCLUSION: THE IMPORTANCE OF A RELIABLE WAVEGUIDE COVER**

---

The waveguide cover is a small but

indispensable component in your Sharp Carousel microwave. By protecting the waveguide and magnetron from contamination, it ensures that your appliance heats food efficiently and safely. Regular inspection and timely replacement of the **Sharp Carousel Microwave Parts Waveguide Cover** are simple maintenance tasks that can prevent more serious issues, such as magnetron failure or electrical arcing. Whether you are troubleshooting a performance problem or performing routine maintenance, understanding this component empowers you to keep your microwave running smoothly for years to come. Take a moment today to examine your waveguide cover; it might be the easiest repair you ever make.